



INSTALLATION INSTRUCTIONS

(Also printed on the protective tape on the product)

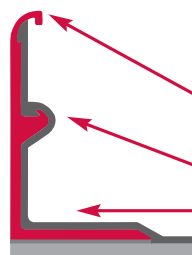


WATERPROOFER

- Trim frame to required length
- Apply masking tape along back edge
- Glue frame to floor ensuring level
- Apply membrane
- Remove masking tape & clean back edge
- Do not remove the protective tape

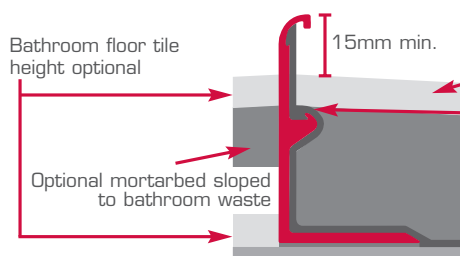

TILE LAYER

- Tile position
- Mortar bed guide for standard thickness tiles only
- Lower mortar bed when laying thicker tiles
- Allow a minimum of 15mm between top of tile and top of frame
- Do not remove the protective tape

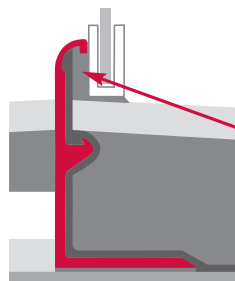

SCREEN INSTALLER

- Remove the protective tape first
- Apply sealant to completely fill cavity as illustrated
- Install screen hard against back edge of frame and on floor tiles

PH 07 54263700 FAX 07 54263711
EMAIL sales@gleda.com.au

Gleda Pty Ltd PO Box 258 Lowood Qld 4311
ABN: 25 108 210 500 Australian Patent Number: 775361

