


INSTALLATION INSTRUCTIONS

Membrane above OR below screed


- Check frame for square after shipping
- Trim hob to required length
- Glue hob to floor ensuring level
- Do not remove the protective tape

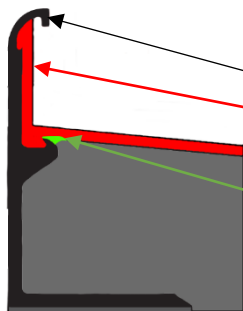

*Membrane above screed ***


WATERPROOFING

- Apply masking tape along lip
- Apply **membrane** ABOVE or BELOW screed
- Apply **urethane sealant** between screed and tile gauge if membrane ABOVE screed
- Do Not remove protective tape

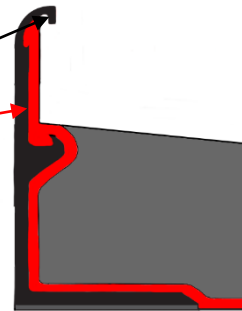


*Membrane below screed ***

Bathroom floor tile height optional

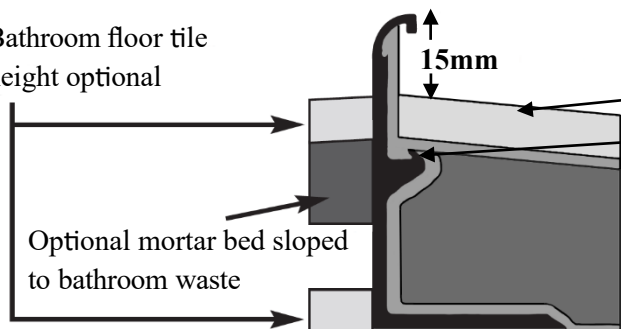

MORTAR BED & TILES

- Tile position
- Mortar bed guide for standard thickness tiles
- Lower mortar bed when laying thicker tiles
- Allow a minimum 15mm between top of tile and top of hob
- Do not remove protective tape

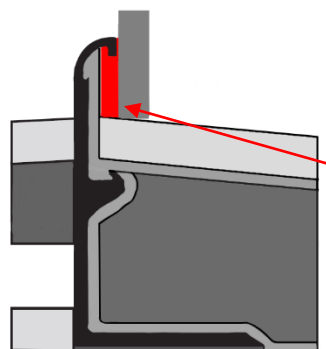

SCREEN INSTALLER

- Remove the protective tape first
- Apply **silicone sealant** to completely fill cavity as illustrated
- Install screen hard against lip of hob and on floor tiles

***Check current AS3740 for membrane location requirements*

PLEASE NOTE: Do not use harsh solvents during installation

PH 07 54263700 FAX 07 54263711
EMAIL sales@waterstopstreamline.com.au

Gleda Pty Ltd, PO Box 258, Lowood Qld 4311
ABN: 25 108 210 500 Australian Patent Number: 775361



Waterstop Streamline

Detailed Installation Instructions

The Streamline hobs are designed to be installed directly to the substrate.

In the case of a concrete floor, the hob can be installed directly to the concrete with two layers of membrane applied inside the shower area.

In the case of a timber floor, many water-proofers will apply the membrane to the entire floor, and once it is dry, install the hob and apply a second coat of membrane inside the shower area. This ensures that the area underneath the hob is protected by a membrane.

The installation method is as follows:-

1. Ensure floor area is perfectly clean and free of debris.
2. Remove Streamline hob from box and check for any shipping damage, including being knocked out of square during transit.
3. Place hob in position and use a tape measure to ensure that the hob is square to the walls.
4. Draw a pencil line on the floor around the inside and the outside of the hob.
5. Lift the hob and place it in a safe place.
You will be left with two pencil lines, 40mm apart.
6. Perform all sealing of wall penetrations and joints, including the wall to floor joints.
7. Clean substrate again of any debris.
8. Run a solid bead of urethane sealant between the pencil lines, from wall to wall.
9. Apply a strip of masking tape to the small lip at the top of the hob and fold it back over the top of the hob to protect it from membrane (see Installed Streamline 2 below).
10. Gently place hob into position, exactly between the pencil lines and using a spirit level, make sure hob is level.
If part of the hob is high, gently push down on the hob to compress the urethane sealant.
If part of the hob is low, use a small plastic tilers wedge or similar to lift that section, but ensure that there is sufficient sealant underneath the hob.
11. Once the hob is perfectly level and square, run a bead of urethane sealant inside the hob to seal it to the wall at each end, and to the floor. Apply sealant over the gusset area. Use a spatula to press and smooth the sealant, being careful not to bump the hob out of square., Seal and install the waste.
12. Apply a coat of liquid membrane inside the shower area, making sure that the membrane is applied up the inside face of the Streamline, right up under the bullnose at the top.
Once dry, apply a second coat of membrane.

Installed Streamline 1:



The above instructions are detailed, but once you've installed a couple, you will find them very quick and easy to install. Most water-proofers can install one in around 15 minutes.

Installed Streamline 2 shows the masking tape in place. Installed Streamline 1 is the finished installation with the masking tape removed, showing the membrane applied right up under the bullnose, but not on the small lip. The Streamline Install guide below shows the position of the membrane.

Installed Streamline 2:



To place order or for more information, please contact:

Gleda Pty Ltd PO Box 258 Lowood Qld 4311

Phone 07 5426 3700 Fax 07 5426 3711

Email sales@waterstopstreamline.com.au

